

eircom 8010R

Digital cordless telephone

User Guide



Irish Trade Mark Registration no. 213824
Registered office: eircom Limited,
1HSQ, St. John's Road, Dublin 8
Registered in Ireland No. 98789



INTRODUCTION

Dear customer:

Thank you for purchasing a eircom 8010R telephone; we appreciate your trust in us. This product was manufactured with the upmost care, should you encounter any difficulties during its use, we recommend that you refer to this user guide. For further information please refer to eircom 8010R helpdesk : 1850 60 20 60.

For your comfort and safety, we ask that you read the following paragraph carefully:

Recommendations and safety instructions



Your DECT telephone must not be installed in a humid room (wash room, bathroom, laundry room, kitchen, etc.) unless it is 1.50 m away from a water point, or outside. Your telephone must be operated at temperatures ranging from 5°C to 45°C.



Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a safety measure, you can use the power adaptors to cut off the 230V current in case of danger. They must be located near to the device, and must be easily accessible.



This telephone was designed for use on the public switched telephone network (PSTN). In case of a problem you must first contact your reseller. Only use the supplied telephone cord.



For your personal safety, never place your handset on the base without the batteries, or without the battery cover, you could get an electric shock.

To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.2 V 550 mAh, never use non rechargeable batteries. Insert the batteries in the handset battery compartment respecting polarity.



At the end of their useful life, batteries must be disposed of according to the recycling instructions presented in this booklet.



Your DECT telephone has an inside radio range of about 50 metres and up to 300 metres in open space. The immediate presence of metal parts (of a television for example), or of any electric appliance may result in range reduction.



Some sensitive medical equipment and safety equipment may be affected by the radio-frequency transmissions of your telephone. In all cases, we ask that you respect the safety recommendations.



In areas where storms are frequent, we recommend that you protect your telephone line using a surge protection device.

This equipment does not function in the case of an electric network shutdown: For the emergency calls, use a self-contained cord telephone.



The CE marking certifies that the product meets the essential requirements of Directive 1999/5/CE of the European Parliament and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference. Furthermore, it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference.

The declaration of compliance may be looked up on the www.sagem-communications.com site or can be obtained from the following address:

Sagem Communication SAS

Customer relations department 4 rue du Petit Albi

95800 Cergy Saint-Christophe -France

CONTENTS

Your telephone

| | |
|----------------------------|---|
| Unpacking | 1 |
| Your base | 1 |
| Your handset | 2 |
| Connecting the base | 4 |
| Handset set-up | 4 |
| Handset turning on and off | 5 |
| Replacing the batteries | 5 |
| Making a call | 6 |
| Receiving a call | 6 |
| During a call | 6 |
| Handsfree | 6 |

Getting started

| | |
|-------------------------------------|---|
| Call transfer | 7 |
| During a call | 7 |
| Accessing the phonebook or call log | 8 |
| Secret mode | 8 |
| Ending a call | 9 |
| Communication between two handsets | 9 |

Menu structure

Your phonebook

| | |
|---|----|
| Viewing the phonebook | 12 |
| Creating an entry | 12 |
| Using a phonebook entry to place a call | 13 |
| Searching for a contact | 13 |
| Performing a quick search | 13 |
| Performing a refined search | 14 |
| Editing an entry | 14 |
| Deleting an entry | 14 |
| Associate a ring tone to your contact | 15 |

Call log

| | |
|--|----|
| Viewing the received and dialled call log | 16 |
| Calling a number listed in the dialled and received call log | 16 |
| Viewing the events log | 17 |

Accessories

| | |
|--|----|
| Alarm clock | 18 |
| Setting the alarm clock | 18 |
| Activating or deactivating the alarm clock | 18 |
| Modifying the alarm clock time | 18 |
| Changing the alarm clock ring tone | 19 |
| Timer | 19 |
| Changing the programmed time of the timer | 19 |
| Changing the timer ring tone | 19 |

| | | |
|---|---|----|
| 1 | Displaying or hiding the programmed time of the timer | 20 |
| 1 | Birthday alarms | 20 |
| 2 | Adding a new birthday alarm | 20 |
| 4 | Viewing a birthday alarm | 20 |
| 4 | Modifying or deleting a birthday alarm | 21 |
| 5 | Monitoring a room | 21 |

Customising the handset

| | | |
|----|---|----|
| 22 | Changing the ring tones | 22 |
| 22 | Activating or deactivating the beeps | 22 |
| 23 | Activating/deactivating the silent mode | 23 |
| 23 | Modify the idle screen | 23 |
| 23 | Modify the colour of the menu backgrounds | 23 |

Security

| | | |
|----|--|----|
| 24 | Locking/unlocking the keypad | 24 |
| 24 | Programming an emergency number | 24 |
| 25 | Defining the call time limit | 25 |
| 26 | Defining forbidden prefixes - Call barring | 26 |
| 27 | Modifying the base code | 27 |
| 27 | Authorising listening in | 27 |

Settings

| | | |
|----|--|----|
| 28 | Programming a key | 28 |
| 28 | Modifying the date and time | 28 |
| 29 | Adjusting the contrast | 29 |
| 29 | Using the auto hang up and pick up features | 29 |
| 29 | Modifying the Voice mailbox number (network mailbox) | 29 |
| 30 | Modifying the language | 30 |

Advanced Settings /

Handset settings

| | | |
|----|-------------------------------------|----|
| 31 | Registering a new handset to a base | 31 |
| 31 | Modifying the base preference | 31 |
| 32 | Resetting the handset | 32 |
| 32 | Personal registering | 32 |

Advanced Settings /

Base settings

| | | |
|----|--|----|
| 33 | Using a handset to put the base in registration mode | 33 |
| 34 | Resetting the base | 34 |
| 34 | De-registering a handset | 34 |
| 35 | Renaming the base | 35 |

Advanced Settings /

Line settings

 
 
| | | |
|----|-----------------------------|----|
| 35 | Modifying the network type | 35 |
| 36 | Modifying the dialling mode | 36 |



CONTENTS



| | |
|--------------------------------------|-----------|
| Modifying the flash duration (R key) | 36 |
| Setting a PABX prefix | 37 |
| Appendix | 38 |
| Care and Maintenance | 38 |
| Problems | 38 |
| Features | 39 |
| Environmental information | 40 |
| Environmental impact | 40 |
| Warranty | 41 |



YOUR TELEPHONE

Unpacking

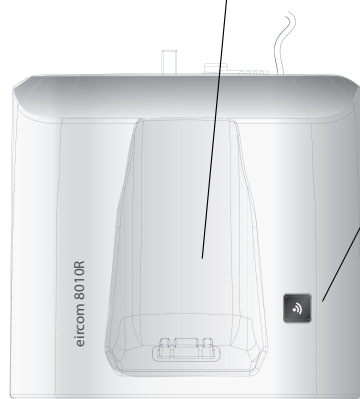 
Place the box in front of you, open it and make sure it contains the following items:

- one eircom 8010R base station,
- one eircom 8010R handset,
- one battery compartment cover,
- one plug,
- one telephone line cord,
- three rechargeable batteries,
- this user guide.

Your base

It fits well into your family environment.

Handset location



Base button

Pressed briefly:
- handset paging.

Held down:
- handset registration.

YOUR TELEPHONE

Your handset

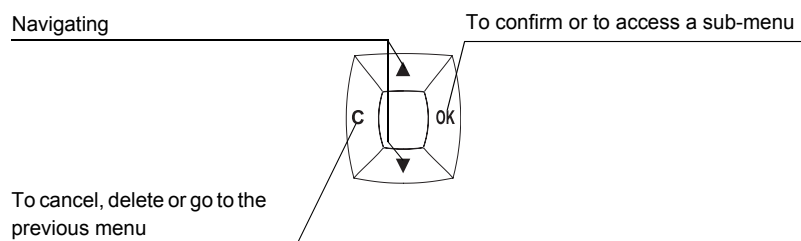 
With its user-friendly design, you will appreciate how easy it is to hold and its quality during conversations.



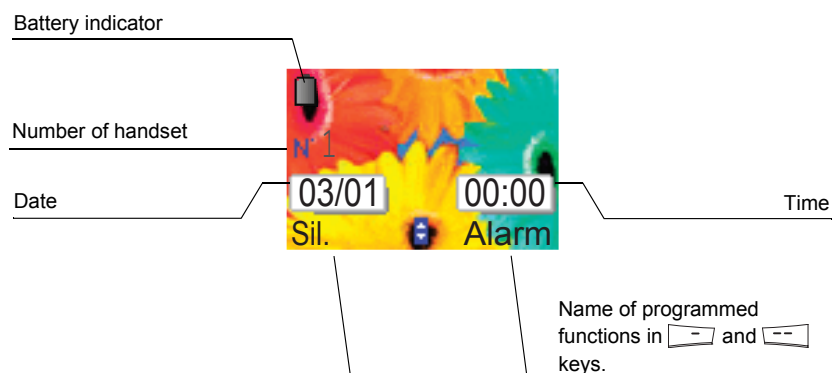 
* eircom messaging is eircom's answering machine on the network. The eircom messaging number is preconfigured for fast access to your mailbox. To modify the number please refer to "Modifying the Voice mailbox number (network mailbox)", on page 29.

YOUR TELEPHONE

The navigator key, a rapid selection tool.



The visual **display** of your handset



When the battery charge icon is at minimum, your screen will not be lit and the volume level of the hands-free function will be decreased until the battery is recharged.

YOUR TELEPHONE

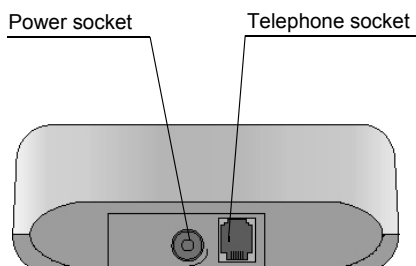 
Connecting the base



Before making any connections, please refer to the safety instructions presented at the beginning of this user guide.

On the back of the base, click in the telephone jack in its socket (as shown on the drawing) and connect the other end of the lead to the wall telephone socket.

Connect the end of the plug lead to the back of the base station and the plug into the mains socket.



Handset set-up

Insert the batteries one after the other in compliance with the battery polarity, as shown on the label in the handset. Place the cover back on the handset by pushing upwards until it is completely closed.

Remove the protective film on the screen, place the handset on the base to fully charge the batteries.

The charging icon appears on the screen, it indicates the charging status. Once the icon is full, your batteries are charged.




Only use certified rechargeable batteries. For optimal battery charge, leave the handset on the base for at least 12 hours during initial use. During charging, the batteries may heat up, this is quite normal and without risk.

YOUR TELEPHONE


Handset turning on and off

To turn off the handset, hold down the red key . The "POWER OFF" message is displayed on the screen. Your handset is now switched off.

To turn on your handset, press the green key .

Information is displayed on the screen, including the battery charging indicator icon, the handset number (for example 1), the date, the time and the function keys.

Replacing the batteries

Hold down the red key  to turn off the handset. Turn it around so that the battery compartment is accessible.

Remove the old batteries, insert the new batteries one by one in compliance with the polarity of the batteries as shown on the label fixed in the handset.

Place the cover back on the handset by pushing upwards until it is completely closed.

Worn out batteries must be disposed of respecting environmental recommendations.



To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.2 V 550 mAH, never use non rechargeable batteries.





Use only rechargeable batteries. Never use conventional (non-rechargeable) batteries or other battery types as this may cause significant damage to health and property. For example, the outer casting of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not rechargeable.

GETTING STARTED



Making a call



Enter the number of your contact using the keypad keys.

If you enter an invalid digit, press **C** on the navigator key  to erase the incorrect

digit. Press the green key  on your handset to make the call.


You can also make a call by:


-  - Pressing the green key  to access the line.
- Dialling your contact's number.

During communication, you can increase or decrease the audio volume of your handset by pressing the  or  key on the navigator.


Receiving a call

When you receive a call your telephone rings. If you have subscribed to a "Caller display" service, the caller's information appears on the screen (unless your caller has enabled the anonymous mode), otherwise the "UNKNOWN" screen is displayed.

Pick up by pressing the green key .

At the end of the conversation, press the red key .


During a call

During a call, numerous options are accessible by pressing **Menu** .


Select the desired option in the following list:



- **HANDSFREE**: to activate the handset speaker.
- **INTERNAL CALL**: to transfer the call to another handset.
- **SECOND CALL**: to make a second call.
- **PHONEBOOK**: to access the phonebook.
- **CALLS**: to access the call log.
- **SECRET**: to mute the handset microphone.

Handsfree

While having a conversation with your contact, you can enable the handset loudspeaker. Press **Menu** .

Select **HANDSFREE**. Press **Activ.** .

When pressing the green key  while engaged in a conversation you automatically activate the handsfree mode of the handset, by pressing it again you deactivate the handsfree mode. When the battery charge icon is at minimum the hands-free function is turned off until the battery is recharged.




The message **HANDSFREE ACTIVATED** appears on the screen. Increase or decrease the audio volume using  or .




GETTING STARTED


Call transfer


This function is only accessible when two handsets or more are registered to the same base. You can now transfer the call in progress to another hand set.




During communication, press **Menu** .

Select **INTERNAL CALL** using  or . Press **Valid.** .

Select the handset you want to call using  or . Press **Call** .

The handset called rings, once someone picks up transfer the call by pressing the red key .

To retake the call before it is picked up by the handset called, press **Menu** .

Select **HANGING UP** using  or . Press **Valid.** .


During a call

During a call, you can receive a second incoming call or place a call to a second contact. You can then switch from one contact to the other.

You may also set a three party conference if the second call has been set from your terminal (depending on your subscription).


Receiving a second call whilst on line


During the call, a beep is transmitted to your telephone by your service provider to let you know that you have a second call waiting.




Press **ACCEPT**  to take this new call.

Your other caller is then put on hold and you can talk with your second caller.

Making a second call whilst on line.

During a call, you can put your contact on hold and call a second one by pressing **Menu** .




Select **SECOND CALL** using  or . Press **Valid.** .

Select your contact's telephone number in the phonebook by pressing  and press **Valid.**  or dial the number using the keypad and press **Call** .

The second call is then launched, with the first call still on hold.

To alternate from one call to the other

Press **Menu** .




Select **SWITCH** using  or . Press **Valid.** .

The call in progress is put on hold, and you can then take the second call.

GETTING STARTED

To end one of the calls and continue the other one

Press **Menu** .

Select **HANGING UP** using  or . Press **Valid.** .


The call in progress is definitely terminated, and you can then take the second call.

 
To set up a 3 way-call (the two parties and yourself)

Press **Menu** .



Select **3-PARTY CONF** using  or . Press **Valid.** .

 
You can then talk to both parties simultaneously.

To end the 3 way-call, press the red key .



Dual incoming call management can also be done via the R key .

- Accepting a second incoming call:

 
 
 + .


 
- Making a second call during communication:  + recipient number.

- Alternating from one call to the other:

 + .

- Ending a call and switching to the call on hold:




 + .

- Setting up a 3 way-call:  + .

Accessing the phonebook or call log

During a call, you can access your phonebook to look up a telephone number, a name contained in an entry or information on calls stored in your call log.

During a call, press **Menu** .

Select **PHONEBOOK** or **CALLS** using  or  and press **Valid.** .




Return to the communication menu using .

Secret mode

You can switch to secret mode at any time during your conversation. Your handset microphone will be switched off and the other person will not be able to hear you.

To activate secret mode:

During a call, press **Menu** .

Select **SECRET** using  or . Press **Activ.** .

The **SECRET MODE** message will appear on the screen.

To deactivate secret mode:

Press **Exit** .


Your correspondent will be able to hear you again.




*You can also choose to deactivate the secret mode by the **C** key on the navigator panel.*




GETTING STARTED


Ending a call


At the end of the conversation, press the red key .

Communication between two handsets


To call another handset, press the  key.

Select with the desired handset with the  or  keys. Press Call .

 
The handset rings. Pick up on the second handset using the green key .

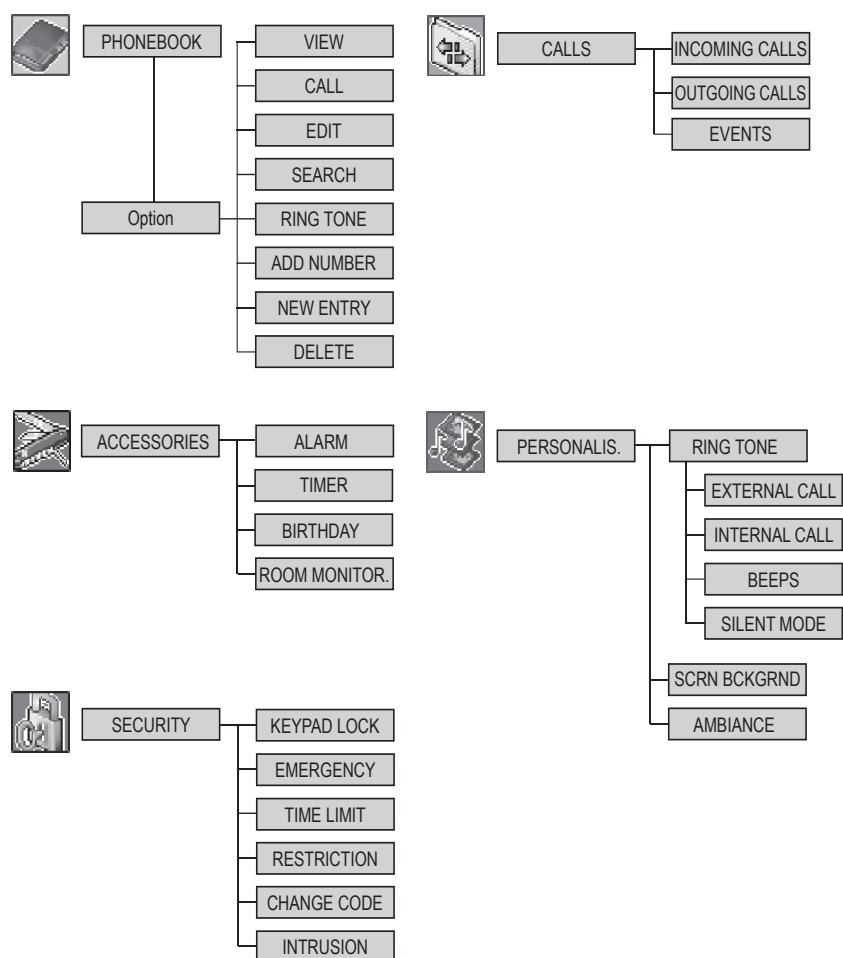 
To end the call, press the red key .



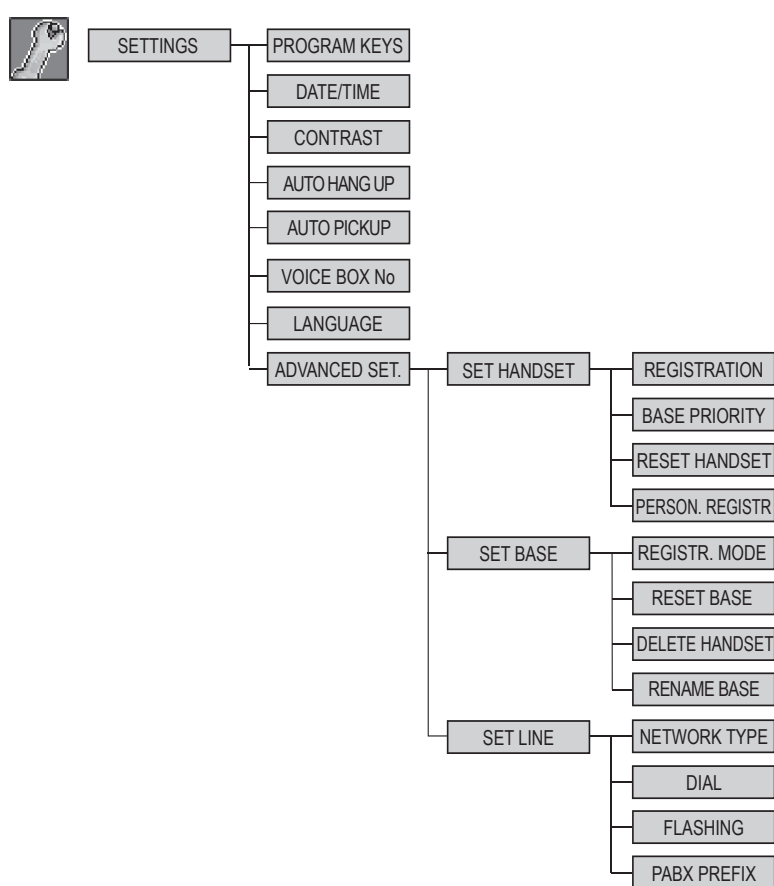 
You can also easily call another handset if you know its number. From the idle screen, enter the number of the handset. Then press the green key .

MENU STRUCTURE

You can navigate through the menus using the navigator key .



MENU STRUCTURE



YOUR PHONEBOOK


 


YOUR PHONEBOOK

You can store 100 phonebook entries in your phonebook.

Each phonebook entry can contain the name of your contact which can be a maximum of 12 characters long (spaces included), your contact's telephone number up to 24 digits and an icon identifying the type of number (work, home, mobile or fax).

You can associate a unique ring tone to each entry and thus create your own call groups. (To use this service, the caller id service must be activate on your line).



Viewing the phonebook

On the navigator key , press  or  until the **PHONEBOOK** screen is displayed, press **OK** to confirm (you can access the phonebook directly using the  key).


The list of phonebook entries organised in alphabetical order appears.




*The first time you access your phonebook, only the **New element** appears in the list.*




Select the entry you want to view using  or . Once you have selected it, press **OK** to confirm.




You can call the number that is associated to the entry directly by pressing the green key .

Once the entry appears on the screen, press  to display all of the available actions that can be executed via the phonebook entry:


 






 
- **CALL**: to call the number associated to the entry.
- **EDIT**: to edit the entry (name, number, icon).
- **SEARCH**: to search for another entry.
- **RING TONE**: to assign a unique ring tone to your handset that will be used each time this number calls you (caller display service mandatory).
- **ADD NUMBER**: to enter a new number for the same name.
- **NEW ENTRY**: to create a new entry in the phonebook.
- **DELETE**: to delete the entry from your phonebook.
- **VIEW**: to view the entry data.

Select the action you wish to perform using  or . Press **Valid**. .


 

To exit the phonebook, press the red key .

Creating an entry

 
 

Alphanumeric keypad key correspondence.

| | |
|---|---------------------------|
|  | 1 |
|  | A, B, C, a, b, c, 2 |
|  | D, E, F, d, e, f, 3 |
|  | G, H, I, g, h, i, 4 |
|  | J, K, L, j, k, l, 5 |
|  | M, N, O, m, n, o, 6 |
|  | P, Q, R, S, p, q, r, s, 7 |
|  | T, U, V, t, u, v, 8 |
|  | W, X, Y, Z, w, x, y, z, 9 |

YOUR PHONEBOOK


-  special characters
-  space, +, @, -, \$, &, %, 0, /
-  #, " . : ; ! ? ' () _

To enter text press successively on the desired key until the letter is displayed on the screen.

On the navigator key , press  or  until the **PHONEBOOK** screen is displayed, press **OK** to confirm.


Select **New**. Press **Valid**. .



The name input screen appears.

Using the keypad keys, enter the name of your contact by pressing successively on the corresponding keys. In case of a mistake, press **C** to erase one character at a time. Once you are done making your changes, press **Valid**. .

The number input screen appears.

Now, enter the name of your contact using the keypad keys. In case of a mistake, press **C** to delete one character at a time.

Once you are done making your changes, press **Valid**. .

 
 

Select an icon for this number, using  or  to specify the type of number:

- | | |
|--|--|
|  : HOME |  : MOBILE |
|  : WORK |  : FAX |

Once the icon is selected, press **Valid**. .

A new entry is created. It appears in the phonebook list. The name of this entry corresponds to the beginning of your contact's name which is preceded by a type icon.

Using a phonebook entry to place a call

On the navigator key , press  or  until the **PHONEBOOK** screen is displayed, press **OK** to confirm.

The list of alphabetical phonebook entries appears.



Select your contact using  or .

Press the green key  to make the call.

Your handset displays the number of your contact and dials this number automatically.

Searching for a contact

When referring to your phonebook, you can search for a contact by:

- navigating through the list using , ,
- using quick search,
- using refined search.

Performing a quick search

Access your phonebook list, press successively on the keypad key which corresponds to the first letter of the name you are searching for so as to make it appear at the top of the screen.


YOUR PHONEBOOK


Once the first letter of the name is displayed, wait a moment.

The phonebook selects the first name in the list that starts with the selected letter.

Press **▲** or **▼** to select the specific entry that you wish to view or call, press **OK** to confirm.

Performing a refined search

In the phonebook menu, press **Option** .

Select **SEARCH** using **▲** or **▼**. Press **Valid.** .


Using the keypad, enter the first letter of the contact you are searching for.


The phonebook positions itself to the entry which comes closest to those two characters.

Press **▲** or **▼** to select the specific entry that you wish to view or call, press **OK** to confirm.


Editing an entry


To edit a phonebook entry (change the name, the number and/or the number type icon), enter the phonebook, select the entry you want to edit and confirm using **OK** to display it on the screen.


Once the entry is displayed on the screen, press **Option** .

Select **EDIT** using **▲** or **▼**. Press **Valid.** .




You enter the name input screen. The cursor is at the end of the name.


- The information is accurate. Press **Valid.** .

- To correct the name, press **C** on the navigator key  to delete characters.

Make your corrections using the keypad keys by pressing successively on the corresponding keys. Once you are finished, press **Valid.** .


You enter the number input screen. The cursor is at the end of the number.


- The information is accurate. Press **Valid.** .
- To correct the number, press **C** on the navigator key  to delete the numbers. Enter the new number and press **Valid.** .

Select the icon according to the type of number entered using **▲** or **▼**. Press **Valid.** .



To exit the menu, press the red key .

Deleting an entry


To delete an entry, enter the phonebook, select the entry, press **Option** .

Select **DELETE** using **▲** or **▼**. Press **Valid.** .

A confirmation screen asks you if you wish to delete the entry.

 


- If you do not wish to delete the entry, press **No** .
- To delete the entry, press **Yes** . The entry is deleted from the phonebook.




YOUR PHONEBOOK

 


To exit the menu, press the red key .

 
 

Associate a ring tone to your contact

You can associate different ring tones to each contact of the repertory and thus create your own groups of calls.

On the navigator key , press  or  until the **PHONEBOOK** screen is displayed, press **OK** to confirm.

Select the contact using  or  keys. Press **Option** .

Select **RING TONE** using  or . Press **Valid.** .

Select the ring tone of your choice using the  or  keys then press **Valid.** .

Each time your contact will call you, the selected tone will ring.

CALL LOG

CALL LOG

This menu enables you to view the call or event lists of your telephone.


 
The dialled call log presents the calls you made.


The received call log presents the calls you received.

The event log groups together all the new events that took place in your absence:

- calls received during your absence,
- operator message service.

Viewing the received and dialled call log

On the navigator key , press \blacktriangle or \blacktriangledown until the **CALLS** screen is displayed, press **OK** to confirm (you can access the call log directly using the  key).


Choose **INCOMING CALLS** or **OUTGOING CALLS**, using \blacktriangle or \blacktriangledown . Press **Valid.** .

The presentation screen for the last call received or dialled appears.


This screen presents the following information (depending on the service provider and subscription):


- the full name of your contact or the telephone number,
- the date or the time and duration of the call.

To view the previous calls, use \blacktriangle or \blacktriangledown . The calls are organised in chronological order, from the most recent call to the oldest call.


 
By pressing **Option** , a list of various executable actions appears:


- **VIEW**: To view the selected call again.
- **CALL**: To call the number.
- **DELETE**: To delete the call currently viewed.
- **STORE NUMBER**: To store the name and number in the phonebook.
- **DELETE ALL**: To delete all calls.

To return to the call view screen, press **Return** .

To exit the menu, press the red key .

Calling a number listed in the dialled and received call log

On the navigator key , press \blacktriangle or \blacktriangledown until the **CALLS** screen is displayed, press **OK** to confirm (you can access the call log directly using the  key).

Select **OUTGOING CALLS** or **INCOMING CALLS**, using \blacktriangle or \blacktriangledown . Press **Valid.** .

The presentation screen for the last call received or dialled appears.

Use \blacktriangle or \blacktriangledown to locate the contact you wish to call. The calls are organised in chronological order, from the most recent call to the oldest call.



Once the call is displayed on the screen, press the green key .

The number is dialled automatically.

CALL LOG

Viewing the events log

If one or more new events occurred during your absence, the information screen **"NEW EVENTS !"** appears.




- If you do not wish to view the event log at this time, press the red key .
- To view the event log, press .



Once the event log has been viewed, the information screen disappears. You can however view it again via the "CALLS" menu.

A summary screen appears. It informs you as to the various events that took place during your absence:

- the calls received during your absence,
- operator message service.

Choose the event using  or . Press **Valid.** .

The event appears on the screen.

ACCESSORIES

ACCESSORIES

This menu offers you numerous additional functionalities:

- **Alarm clock:** to use your handset as an alarm clock.
- **Timer:** to remind you of an event (programmed to sound at the end of a few minutes or a few hours).
- **Birthday:** the handset will ring at the set date and time to remind you of the name of the person to whom you would like to wish happy birthday.
- **Monitoring a room:** use a handset to monitor a room.




If the alarm timeout expires (wake up, timer, anniversary and agenda) during a call, a beep is emitted in the ear-phone and the message of alarm appears on the screen while flickering.


Alarm clock

The alarm function enables you to activate the handset ringer every day at a set time.



When the alarm is triggered the selected ring tone sounds for 60 seconds through the handset speaker and an alert screen is displayed. To turn off the alarm press any key on the handset.

Setting the alarm clock

On the navigator key , press ▲ or ▼ until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **ALARM** using ▲ or ▼. Press **Valid.** .


An information screen shows the alarm clock status.


- the time at which the handset will ring,
- if the alarm is on or off.
- To keep these settings, press **Valid.** .
- To change the alarm time or status (on or off), press **Edit** .

A list showing the different settings appears.


Activating or deactivating the alarm clock


To activate or deactivate the alarm clock without changing the time.


Select **ACTIVATE** or **DEACTIVATE** in the list using ▲ or ▼. Press **Valid.** .

The alarm settings information screen appears showing the new status. Press **Valid.** .

Modifying the alarm clock time


Select **SET TIME** in the list using ▲ or ▼. Press **Valid.** .

Enter the time at which you would like the alarm clock to sound. Press **Valid.** .


The activation screen appears. Press **Yes**  to activate the alarm.

ACCESSORIES


Changing the alarm clock ring tone

To modify the alarm clock ring tone, select **RING TONE** in the alarm clock menu using ▲ or ▼. Press **Valid.** .


The list of ring tones appears.
Select the desired ring tone using ▲ or ▼.

Press **Volume**  to access the volume setting screen.

Press ▲ or ▼ to increase or decrease the volume.

Once the volume is set, press **Valid.** .

Press **Return** .

An information screen shows the alarm clock settings, press **Valid.** .


To exit the menu, press the red key .


Timer


The timer function activates the handset ringer at a programmed time. You can view the programmed time on the screen.





Incoming calls are displayed directly without interrupting the timer. For access to timer adjustment you must stop it once it is started.

*Once the specified time has elapsed, the handset rings for 60 seconds and the alarm screen is activated. Turn off the alarm by pressing **Stop** . The handset stops ringing.*

On the navigator key , press ▲ or ▼ until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **TIMER** using ▲ or ▼. Press **Valid.** .


- To launch the timer without changing the displayed delay, press **Start** .
- To change the programmed time, press **Edit** .


A list showing the different settings appears.

Changing the programmed time of the timer


Select **SET DURATION** in the list. Press **Valid.** .

Enter the desired time. Press **Valid.** .

Press **Return**  to display the timer activation screen.

The timer activation screen appears with the modification. Press **Start**  to launch the timer.


Changing the timer ring tone


To modify the timer ring tone, select **RING TONE** using keys ▲ or ▼. Press **Valid.** .


The list of ring tones appears, the handset plays the ring tone.


Select the ring tone using keys ▲ or ▼.

ACCESSORIES


Press **Volume**  to access the volume setting screen.


Press **▲** or **▼** to increase or decrease the volume. Once the volume is set, press **Valid.** .


Press **Return** , the timer activation screen appears.


Launch the timer by pressing **Start** .


Displaying or hiding the programmed time of the timer

To display (or hide) the time on the screen during its countdown, select **VIEW** in the Timer menu using **▲** or **▼**. Press **Valid.** .

A screen appears indicating if you want to show the timer, press **Yes** .

Press **Return** , the timer activation screen appears.


Launch the timer by pressing **Start** .


To exit the menu, press the red key .


Birthday alarms


You can programme birthday alarms (10 alarms) on your DECT telephone. Your telephone will ring for 60 seconds and an alarm screen will appear to remind you of such events. The alarm screen will remain displayed until one of the keypad keys is pressed.


Adding a new birthday alarm


On the navigator key , press **▲** or **▼** until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **BIRTHDAY** using **▲** or **▼**. Press **Valid.** .

Select **New** using **▲** or **▼**. Press **Valid.** .

Enter the name of the person concerned using the keypad keys. To delete a character, press the **C** key. Press **Valid.** .

Enter the birth date using the keypad keys. Press **Valid.** .

Enter the alarm activation time. Press **Valid.** .

Viewing a birthday alarm

In the birthday alarm list screen, select the alarm you would like to view using **▲** or **▼**, and press **OK** to confirm.

The birthday alarm entry appears on the screen. This entry consists of:

- *the name of the person concerned,*
- *the birth date,*
- *the time at which you would like to be notified by the alarm.*

ACCESSORIES


Modifying or deleting a birthday alarm

In the birthday alarm list screen, select the alarm you wish to edit using ▲ or ▼. Press

Option .

The following options are available:

- **VIEW**: to view the alarm data.
- **EDIT**: to change the alarm name or date.
- **DELETE**: to remove a birthday or organiser alarm.
- **RING TONE**: to set the ring tone that will sound when the alarm goes off.
- **NEW ENTRY**: to set up a new alarm.

To exit the menu, press the red key .


Monitoring a room

Two handsets must be registered on the same base to use this function. You can use your handset to monitor a room. This allows you, for example, to monitor a baby's room.


To do so, place one of the handsets in the room to be monitored. This unit will be in "sender" mode.


The other handset will remain with you, it is in "receiver" mode.

On the receiver handset:


On the navigator key , press ▲ or ▼ until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **ROOM MONITOR** using ▲ or ▼. Press **Valid** .

Select the sender handset using ▲ or ▼. Press **Call** .

The sender handset rings, pick up using the green key .

On the transmitter handset:

A screen invites you to activate the monitor mode (sender mode). Press **Yes** .

Both handsets are now in monitor mode.


- Place the sender handset in the room to be monitored.



The handset in sender mode does not ring to notify you of incoming calls. It can therefore be placed in a room where someone is sleeping.

- Keep the receiver handset with you.

When in monitor mode, the receiver handset can be used to make calls.

*To make a call: press **Call**  and dial the number*







To answer a call: press green

key .

At the end of the call, the handset will automatically return in monitor mode.

To stop monitoring:

- Press **Stop**  on the transmitter set. The receiver set will automatically return to the standby screen.
- Press **Stop**  on the receiver set and confirm by pressing **Yes**  and **Stop**  on the transmitter handset at the same time.

CUSTOMISING THE HANDSET


 

CUSTOMISING THE HANDSET




This menu allows you to modify the ring tones and the visual interface of the handset, and particularly:




- to assign different ring tones for incoming calls outside or intercom (between handsets),
- to change the idle screen picture,
- to change the menu background colour,
- to activate or deactivate tones being sounded when pressing the keypad or when validating the settings information of your handset.
- activate or deactivate silent mode.




Changing the ring tones




This menu enables you to associate a unique ring tone to incoming calls or internal calls (intercom).

On the navigator key , press  or  until the **PERSONALIS.** screen is displayed, press **OK** to confirm.

Select **RING TONE** using  or . Press **Valid.** .


 

Select **EXTERNAL CALL** or **INTERNAL CALL** using  or . Press **Valid.** .




Select the ring tone of your choice using the  or  keys then press **Volume** .




Adjust the ringer volume using  or , press **Valid.** .




To exit the menu, press the red key .

Activating or deactivating the beeps

On the navigator key , press  or  until the **PERSONALIS.** screen is displayed, press **OK** to confirm.

Select **RING TONE** using  or . Press **Valid.** .

Select **BEEPS** using  or . Press **Valid.** .




Select the beep type using  or . Press **Valid.** .


KEYTONE: the handset beeps when a key is pressed.

BATTERY LOW: the handset beeps when the battery is too low.

CHARGER: the handset beeps when you hang up the handset.

An information screen displays the beep status for the selected item (Active or Inactive).


- To change the status, press **Edit** . The status is modified on the screen. Press **Valid.** .
- To keep the status, press **Valid.** .


To exit the menu, press the red key .


CUSTOMISING THE HANDSET

 
Activating/deactivating the silent mode

When in silent mode, the telephone ringer and keypad beeps are inhibited.


On the navigator key , press ▲ or ▼ until the **PERSONALIS.** screen is displayed, press **OK** to confirm.

Select **RING TONE** using ▲ or ▼. Press **Valid.** .

Select **SILENT MODE** using ▲ or ▼. Press **Valid.** .

 



Press **Yes**  to activate the silent mode.


To exit the menu, press the red key .

Modify the idle screen


This menu allows is for changing the your handset idle screen picture.


On the navigator key , press ▲ or ▼ until the **PERSONALIS.** screen is displayed, press **OK** to confirm.

Select **SCRN BCKGRND** using ▲ or ▼. Press **Valid.** .

Select from among the images presented using the ▲ or ▼ keys. Press **View** .

 
The image is displayed on the screen.


Press **Valid.** , to keep this image as the background display or use the ▲ or ▼ keys to select a different one.


To exit the menu, press the red key .


Modify the colour of the menu backgrounds

This menu is for changing the menu background colour.

On the navigator key , press ▲ or ▼ until the **PERSONALIS.** screen is displayed, press **OK** to confirm.

Select **AMBIANCE** using ▲ or ▼. Press **Valid.** .

Select the desired colour using the ▲ or ▼ keys, the colours are displayed on the screen as they are reviewed for selection. Press **Valid.** .

To exit the menu, press the red key .

SECURITY


SECURITY

This menu enables you to change or customise the security parameters of your telephone. You can:


 

- *lock the keypad,*
- *programme an emergency number,*
- *modify the base code,*
- *define the call time limit,*
- *define forbidden prefixes,*
- *authorise or deny communication to a number of handsets.*




Locking/unlocking the keypad




To lock/unlock the keypad, press and hold the keypad key  for some time.

*You can also lock your keypad via the **SECURITY** menu.*

On the navigator key , press  or  until the **SECURITY** screen is displayed, press **OK** to confirm.

Select **KEYPAD LOCK** using  or . Press **Valid.** .


To lock the keypad, press **Yes** .


A screen indicates that the keypad is locked.

Programming an emergency number

This function allows you to define an emergency number which can be enabled or disabled.

 
 

Once it is activated, the emergency number will be automatically dialled when the green




key  is pressed from the idle screen.

- *Once activated, you can however call a different number with pre-dialling by dialling a number and pressing .*





The following type of numbers cannot be programmed : Fire, emergency, police and rescue services.

On the navigator key , press  or  until the **SECURITY** screen is displayed, press **OK** to confirm.

Select **EMERGENCY** using  or . Press **Valid.** .


An information screen displays the current stored emergency number and indicates whether it is enabled or disabled.

- To keep the setting, press **Valid.** .
- To modify the setting, press **Edit** .



SECURITY

A list of various executable actions appears:


- **ACTIVATE:** to activate the emergency number.
- **DEACTIVATE:** to deactivate the emergency number.
- **CHANGE NO:** to modify the emergency number.

To modify the emergency number, select **CHANGE NO**. Press **Valid**. .

Enter the new number using the keypad. You can pick a number from the phonebook.

Press , make your selection and **Valid**. .

the active mode is set automatically.
An information screen presents the new emergency number.

To activate/deactivate the emergency number, select the corresponding option. Press **Valid**. .

To exit the menu, press the red key .


The emergency number is automatically activated. The name of the handset displayed on the idle screen becomes EMERGENCY.


Defining the call time limit

You can set your telephone's operating time. Once the call time limit is used up, it is no longer possible to make calls. To be able to call again, you will have to deactivate the call time limit or set a new limit.



If the time limit ends during a telephone conversation, communication will not be cut off. Once you have hung up, it will not be possible to make a new call. Calls between handsets (internal calls) are not affected by the call time limit.




On the navigator key , press **▲** or **▼** until the **SECURITY** screen is displayed, press **OK** to confirm.

Select **TIME LIMIT** using **▲** or **▼**. Press **Valid**. .


An information screen displays the remaining time limit and its status.


- To keep the setting, press **Confirm**. .
- To modify the setting, press **Edit**. .

Enter the base code (default is 0000). Press **Valid**. .

A list of various executable actions appears:

- **ACTIVATE:** To activate the emergency number.
- **DEACTIVATE:** To deactivate the emergency number.
- **EDIT TIME:** To modify the emergency number.

Select **EDIT TIME** using **▲** or **▼**. Press **Valid**. .

Enter the new time limit using the keypad (maximum 999 minutes). Press **Valid**. , the active mode is set automatically.

SECURITY

Once the modifications have been made, the information screen shows the new call time limit.


To exit the menu, press the red key .


Defining forbidden prefixes - Call barring


You can prohibit the use of certain prefixes on your telephone. When a prefix is forbidden, it becomes impossible to call numbers that begin by this prefix.



Depending on the programmed prefixes, certain numbers will no longer be accessible. For example, if you programmed 06 as a forbidden prefix, it will not be possible to call a number that begins by 06.

On the navigator key , press ▲ or ▼ until the **SECURITY** screen is displayed, press **OK** to confirm.

Select **RESTRICTION** using ▲ or ▼. Press **Valid.** .


Enter the base code. Press **Valid.** .

The prefix screen appears.





You can programme up to 5 forbidden prefixes.


For creating or modifying a prefix

Select an empty location (dashes) or a prefix to modify using ▲ or ▼. Press **Valid.** .


The prefix input screen appears.

Enter the prefix using the keypad. Press **Valid.** .


When all prefixes are programmed, press **Return** .

A restriction activation screen appears, press **Yes**  to activate restriction.


For deleting a prefix:

Select the prefix you wish to delete with the keys ▲ or ▼, press **Valid.** .

The window for filling in the prefix opens.

Don't fill in any number but press directly  key.


The prefix is deleted and the place chosen before is empty (dashes).

To exit the menu, press the red key .


SECURITY


Modifying the base code


The base code (0000 being the default setting) is required to access certain security functions. It must be composed of 4 digits.


On the navigator key , press ▲ or ▼ until the **SECURITY** screen is displayed, press **OK** to confirm.

Select **CHANGE CODE** using ▲ or ▼. Press **Valid.** .

Enter the old base code using the keypad (default is 0000). Press **Valid.** .

Enter the new base code using the keypad. Press **Valid.** .

Confirm by entering the new base code again. Press **Valid.** .

 
To exit the menu, press the red key .




Carefully note down the base code number. You will need this code to change certain settings.



Authorising listening in


The intrusion function authorises or prevents a second handset registered on the same base from joining in a current conversation. If the intrusion mode is active, it is then possible to join a conversation in progress using another handset.

On the navigator key , press ▲ or ▼ until the **SECURITY** screen is displayed, press **OK** to confirm.

Select **INTRUSION** using ▲ or ▼. Press **Valid.** .

A screen displays the current status (on or off).

- To change the status, press **Edit** .
- To keep the status, press **Valid.** .



To exit the menu, press the red key .




SETTINGS




SETTINGS


This menu enables you to change or customise the handset and base parameters.



Programming a key



This function enables you to programme the  and  keys on your handset giving you direct access to certain functions right from the idle screen.

On the navigator key , press  or  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **PROGRAM KEYS** using  or . Press **Valid.** .

A screen presents the function currently assigned the  key.

- To keep the function, press **Valid.** .
- To modify the function, press **Edit** .

Choose from the function list the function you want to assign to the key. Press  or  to select one of the following functions:

- | | |
|-----------|------------|
| • SILENCE | • KEY LOCK |
| • ALARM | • NUMBER |
| • TIMER | • REDIAL |



Press **Valid.** .






With the number function, you associate a telephone number to a program key. You can thus quickly call your contact.






If you programme the function "Number" to the two softkeys, each number will be programmed separately.




Once the  key is programmed, a screen invites you to programme the key .


- To modify the function, press **Edit** .
- To keep the function, press **Valid.** .


To exit the menu, press the red key .


Modifying the date and time

On the navigator key , press  or  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **DATE/TIME** using  or . Press **Valid.** .

 
A screen displays the current date.
Enter the date in DD/MM/YY format and press **Valid.** .


A screen displays the current time.
Enter the time in HH/ MM format and press **Valid.** .

To exit the menu, press the red key .

SETTINGS


Adjusting the contrast

On the navigator key , press ▲ or ▼ until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **CONTRAST** using ▲ or ▼. Press **Valid.** .

A list presenting five contrast levels appears.

Select the desired level using ▲ or ▼. The contrast is directly visible on the screen.

Adjust the contrast until you have obtained a satisfactory level. Press **Valid.** .

To exit the menu, press the red key .

 
Using the auto hang up and pick up features

The auto hang up feature enables you to automatically hang up by simply putting the handset back on its base.





If the auto hang up feature is on, communication ends when the handset is put back on its base.


When active, the auto pick up feature enables you to automatically pick up as soon as you remove the handset from its base.

On the navigator key , press ▲ or ▼ until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **AUTO HANG UP** (or **AUTO PICKUP**) using ▲ or ▼. Press **Valid.** .

A screen displays the current status (on or off).

- To change the status, press **Edit** .
- To keep the status, press **Valid.** .

To exit the menu, press the red key .

Modifying the Voice mailbox number (network mailbox)


This function enables you to receive calls when absent on a voice messaging service of the switched network.

The network mailbox is your network providers answering machine. You cannot use the network mailbox unless you have applied to your network provider.

*eircom customers call **1901** for information on eircom call messaging.*

 
- MWI icon "9" appears when a new voice message has been received in your network mailbox.
- MWI icon "9" disappears as soon as you have called your network mailbox for retrieval.




*To check your voice messaging service, hold down key **1** .*



SETTINGS


The number of your voice messaging service is set in the factory. To change this number, proceed as follows:

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **VOICE BOX No** using **▲** or **▼**. Press **Valid.** .

The programmed number is displayed on the screen,

 
- The number is correct, press **Valid.** .
- To modify the number, press **Edit** .


Delete the numbers using the navigator **C** key. Enter the number. Press **Valid.** .

To exit the menu, press the red key .



Modifying the language


This function enables you to change the screen display language.


On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **LANGUAGE** using **▲** or **▼**. Press **Valid.** .

An information screen presents the current language used.

- To keep the setting, press **Valid.** .
- To change the setting, press **Edit** .

Choose the desired language from the language list. Press **▲** or **▼** to select the language. Press **Valid.** .

The screen shows the new language used. Press **Valid.** .

To exit the menu, press the red key .

SETTINGS

ADVANCED SETTINGS / HANDSET SETTINGS

Registering a new handset to a base

To register a new handset to a base you must:


- put the handset in registration mode,
- put the base in registration mode.


Once this is done, the registration (mutual recognition of the base and the new handset) will be done automatically (registration can take a few seconds).



If the code of the base has been modified (different from 0000), the registration will not be possible with this procedure, refer to paragraph **Personal registering**, page 32


Take the handset to be registered:

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** using **▲** or **▼**. Press **Valid.** .


Select **SET HANDSET** using **▲** or **▼**. Press **Valid.** .

Select **REGISTRATION.** Press **Valid.** .

Press **Yes**  to put the handset in registration mode.

The handset enters the registration mode.

On the base:

Put the base to which you want to link the handset in registration mode and press the base button  for several seconds.

The base is in registration mode.

The new handset and the base are mutually searching for each other. The registration may take several seconds.


Once the handset is registered, the handset automatically exits the registration mode and lets you know the registration is done.




You can also set your base to the registration mode using a handset already registered by selecting the **Registration** function in the menu **SETTINGS/ADVANCED SET./SET BASE.**


Modifying the base preference

This function enables you to specify which base will be used by your handset to make calls (if your handset is registered to several bases).

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.



Select **ADVANCED SET.** using **▲** or **▼**. Press **Valid.** .

Select **SET HANDSET.** Press **Valid.** .


Select **BASE PRIORITY** using **▲** or **▼**. Press **Valid.** .

SETTINGS

An information screen presents the current base preference for your handset.

- To keep the preference, press **Valid.** .
- To modify the preference, press **Edit** .

A list provides the bases among which you can choose the preferred base to which you want your handset to be registered. With the automatic mode you are not required to specify the preference.

Select the base preference using ▲ or ▼.
Press **Valid.** .

 
To exit the menu, press the red key .


Resetting the handset

When you reset your handset, all the parameters are reset to their initial value (factory settings) with the exception of the phonebook, and SMS parameters.




When resetting the handset, the security functions (forbidden prefixes and time limit duration) are not set back to their initial value.



On the navigator key , press ▲ or ▼ until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** using ▲ or ▼.
Press **Valid.** .

Select **SET HANDSET.** Press **Valid.** .

Select **RESET HANDSET** using ▲ or ▼.
Press **Valid.** .

A confirmation screen will prompt you to confirm your request:

 
- To re-initialise your handset, press **Yes** .
- If you do not wish to re-initialise your handset, press **No** .


To exit the menu, press the red key .

Personal registering


To register a handset in the following cases:


- *the base's code is no longer 0000 (you have customised the code),*
- *you own several bases,*
- *you want to choose a name for your base (name displayed on the welcome screen),*
- *you want to choose the handset registration number.*

On the navigator key , press ▲ or ▼ until the **SETTINGS** screen is displayed, press **OK** to confirm.


Select **ADVANCED SET.** using ▲ or ▼.
Press **Valid.** .

Select **SET HANDSET.** Press **Valid.** .


Select **PERSON. REGISTR** using ▲ or ▼,
Press **Valid.** .

Select the required base number. Press **Valid.** .

Delete the current base name using **C** key (if necessary).


Enter the new name, press **Valid.** .

SETTINGS


Enter the base code. Press **Valid.** .

The handset enters the registration mode, **"HANDSET IN REGISTR. MODE"** is displayed on the screen.

Put the base to which you want to register the handset in registration mode.

Once the handset is registered, select the required handset number. Press **Valid.** .


On the base:

Put the base to which you want to link the handset in registration mode and press the base button  for several seconds.

The base is in registration mode.

The new handset and the base are mutually searching for each other. The registration may take several seconds.


 

Once the handset is registered, the handset automatically exits the registration mode and lets you know the registration is done.




 *You can also set your base to the registration mode using a handset already registered by selecting the Registration function in the menu **SETTINGS/ADVANCED SET./SET BASE.***

 


ADVANCED SETTINGS / BASE SETTINGS

 


Using a handset to put the base in registration mode


*This function enables you to put the base in registration mode so you can register a new handset. To do so, the handset to be registered must be in registration mode (refer to paragraph **Registering a new handset to a base**, page 31).*

On the navigator key , press  or  until the **SETTINGS** screen is displayed, press **OK** to confirm.



Select **ADVANCED SET.** using  or . Press **Valid.** .

Select **SET BASE** using  or . Press **Valid.** .

Select **REGISTR. MODE** using  or . Press **Valid.** .

A screen prompts you to confirm the setting of the base to the registration mode. Press **Yes**  to enter the registration mode. The indicator light on your base starts to quickly blink green.


Your base will remain in registration mode for about 1 minute.


 *You can also put the base in registration mode by pressing the base button  (long press).*

SETTINGS


Resetting the base

When you reset your base, all the base parameters are reset to their initial values (factory settings).



On the navigator key , press ▲ or ▼ until the **SETTINGS** screen is displayed, press **OK** to confirm.


Select **ADVANCED SET.** using ▲ or ▼. Press **Valid.** .


Select **SET BASE.** Press **Valid.** .

Select **RESET BASE** using ▲ or ▼. Press **Valid.** .

A confirmation screen will prompt you to confirm your request:

- To reset the base, press **Yes** .
- If you do not wish to reset the base, press **No** .

Enter the base code. Press **Valid.** . The **RE-INIT. IN PROCESS** message is displayed on the screen.

 
To exit the menu, press the red key .




When resetting the base, the base code becomes 0000 again.

De-registering a handset


This function enables you to de-register a handset from your base. This may be necessary if you have lost a handset or if you already have 6 handsets registered to the same base.


On the navigator key , press ▲ or ▼ until the **SETTINGS** screen is displayed, press **OK** to confirm.


Select **ADVANCED SET.** using ▲ or ▼. Press **Valid.** .

Select **SET BASE.** Press **Valid.** .

Select **DELETE HANDSET** using ▲ or ▼. Press **Valid.** .


Select the handset you wish to unregister in the list by pressing ▲ or ▼. Press **Valid.** .


A screen prompts you to confirm the unregistration. Press **Yes**  to unregister the handset.

To exit the menu, press the red key .

SETTINGS


Renaming the base


On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.


Select **ADVANCED SET.** using **▲** or **▼**. Press **Valid.** .

Select **SET BASE.** Press **Valid.** .

Select **RENAME BASE** using **▲** or **▼**. Press **Valid.** .

Select the base for which you want to modify the name using **▲** or **▼**. Press **Valid.** .

Enter the new name using the keypad. Press **Valid.** .

To exit the menu, press the red key .

ADVANCED SETTINGS / LINE SETTINGS

 



Before changing the settings of the telephone line, contact your operator to obtain the parameters for your line.


Modifying the network type


Your DECT telephone can be installed on a public or private network (when using a PABX).

This function enables you to configure your telephone according to the type of network.




On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** using **▲** or **▼**. Press **Valid.** .

Select **SET LINE** using **▲** or **▼**. Press **Valid.** .

Select **NETWORK TYPE** using **▲** or **▼**. Press **Valid.** .

A screen presents the current status (public or private).

- To keep the status, press **Valid.** .
- To change the status, press **Edit** . The status is modified on the screen, press **Valid.** .


SETTINGS


To exit the menu, press the red key .


Modifying the dialling mode


Depending on the type of network your telephone is linked to, it uses tone or pulse dialling.

This function enables you to configure your telephone according to the type of dialling used by your network.




On the navigator key , press \blacktriangle or \blacktriangledown until the **SETTINGS** screen is displayed, press **OK** to confirm.


Select **ADVANCED SET.** using \blacktriangle or \blacktriangledown . Press **Valid.** .

Select **SET LINE** using \blacktriangle or \blacktriangledown . Press **Valid.** .

Select **DIAL** using \blacktriangle or \blacktriangledown . Press **Valid.** .

A screen displays the current status (pulse or tone).

 
- To keep the status, press **Valid.** .
- To change the status, press **Edit** . The status is modified on the screen, press **Valid.** .


To exit the menu, press the red key .


Modifying the flash duration (R key)


If you connect your telephone to a private automatic branch exchange or use it in a foreign country, you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call, 3 way calling.

Contact your service provider to obtain the correct flash duration and then modify it by doing the following.



On the navigator key , press \blacktriangle or \blacktriangledown until the **SETTINGS** screen is displayed, press **OK** to confirm.


Select **ADVANCED SET.** using \blacktriangle or \blacktriangledown . Press **Valid.** .

Select **SET LINE** using \blacktriangle or \blacktriangledown . Press **Valid.** .


Select **FLASHING** using \blacktriangle or \blacktriangledown . Press **Valid.** .

An information screen presents the current flash duration.


- To keep the duration, press **Confirm** .
- To modify the duration, press **Edit** .

Select the new duration using \blacktriangle or \blacktriangledown . Press **Valid.** .

The screen presents the new flash duration.

- To keep the duration, press **Confirm** .

SETTINGS

- To modify the duration, press **Edit** .


 

To exit the menu, press the red key .




Setting a PABX prefix




If a private automatic branch exchange is used, you can programme the external call prefix.

With this function you can set the:



- PABX prefix number,
- dialled number length at which point the PABX will be automatically dialled (this length is called "digit before prefix"),
- prefix status (on or off).


On the navigator key , press  or  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** using  or , Press **Valid.** .

Select **SET LINE** using  or , Press **Valid.** .




Select **PABX PREFIX** using  or , Press **Valid.** .


An information screen presents the PABX setting in progress. Press  or  key.




Press **Yes** , to modify this setting.


Select the desired option:


- **ACTIVATE/DEACTIVATE:** to select a status.
- **PREFIX:** to enter the number giving you access to the outside line.
- **EDIT LENGTH:** to specify the «digits before prefix».
- **EXIT PABX:** to exit the menu.

To modify the prefix, select **PREFIX** using  or , press **Valid.** .

Enter the prefix using the keypad, press **Valid.** .

To modify the digits before prefix, select **EDIT LENGTH** using  or , press **Valid.** .

Enter the digits before prefix using the keypad, press **Valid.** .

To exit the menu, press the red key .

APPENDIX

Care and Maintenance

Use a slightly damp cloth to wipe the base and handset, do not use a dry cloth as this may cause electrostatic charges.

Problems

Refer to the table presented below in case of an operational malfunction:

| Problems | Remedies |
|--|---|
| The handset displays "OUT OF RANGE". | Make sure that : <ul style="list-style-type: none"> the plug is properly connected to a power socket. the power connector is properly plugged into the base. your fuse and circuit-breaker are in working order and that the power socket is powered. |
| The handset display is blank | Make sure the batteries are properly installed. Place the handset on the base and fully charge the batteries. To increase the life of your batteries, you can perform this operation about every two months. If these precautionary measures do not resolve this issue, replace the batteries. Only use rechargeable batteries. As time goes by, you may notice a slight decrease in battery performance. Use your handset until the battery is fully discharged, and then charge it for at least 12 hours. |
| The handset does not ring during an incoming call | Make sure that the telephone is properly connected and that you have a dial tone. Make sure your telephone is not set to silent mode (see paragraph Settings). |
| No radio link between the handset and base The network indicator icon flashes | Make sure the handset is registered by moving closer to the base, if it is registered correctly, the handset screen should display its own handset number. Otherwise, register the handset to the base. See "Registering a new handset to a base", page 31. |
| You obtain a "busy" dial tone for each dialled number | Make sure no one else is using another handset (if the intrusion mode is deactivated). Make sure that the dial mode (tone or pulse dialling) is compatible with your telephone line or your automatic branch exchange. Make sure your time limit has not run out (if activated). Make sure you are not on call restriction (if activated) |

FEATURES

| Functions | Default settings | Functions | Default settings |
|--------------------------------|------------------|-------------------------|-------------------|
| ACCESSORIES | | Ambiance | COLOR 1 |
| Alarm clock | Off | SETTINGS | |
| Timer | Off | Program keys | Silence / Alarm |
| Room monitor | Off | Date/Time | 00:00 // 01/01/08 |
| SECURITY | | Auto Hang up | On |
| Keypad lock | Off | Auto Pick up | Off |
| Emergency | Off | Language | English |
| Base code | 0000 | Advanced settings | |
| Time limit | Off | • Line settings | |
| Restriction | Off | Network type | Public |
| Intrusion | Off | Dial | Tone |
| CUSTOMISING THE HANDSET | | Flashing | 100 ms |
| Ringer (Ext/Int) | Africa / Amazone | PABX prefix | Off |
| Silent mode | Off | • Base settings | |
| Beeps | All active | Base name | BASE 1 |
| Screen background | FLOWERS | Number of handsets/base | up to 5 |

| Telephone features | | | |
|------------------------|------------------|--------------------|------------------|
| Number of channels | 120 | Autonomy | |
| Radio frequency band | 1,88 - 1,90 GHz | standby time | 150 hours |
| Duplex mode | TDMA | talk time | 15 hours |
| Spacing between | 1,728 MHz | Handset range | |
| Bit rate | 1152 Kbit/s | open space | up to 250 m |
| Modulation | GFSK | inside building | up to 40 m |
| Vocoding | ADPCM | Base dimensions | 89 x 122 x 83 mm |
| Transmitting power | 250 mW | Base weight | 193 g |
| Base operating voltage | 230 V , 50/60 Hz | Handset dimensions | 140 x 51 x 30 mm |
| Charging time | 12 hours | Handset weight | 152 g |

All of this data is provided to you for information purposes only. Sagem Communications reserves the right to make any changes without notice.

ENVIRONMENTAL INFORMATION

Environmental impact

Electrical and Electronic appliances are an integral part of our daily lives. In order to avoid any possible adverse effects resulting from the disposal of such equipment, which contain substances damaging to the environment and health, the Council directives 2002/96/EC and 2002/95/EC of the European Parliament have been transposed into national law in all EU member states:



2002/96/EC on waste electrical and electronic equipment (WEEE) and 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment (ROHS).

Due to hazardous contents Waste Electrical, Electronic Equipment (WEEE) cause environmental and human health issues during the waste management process if not properly pre-treated (sorted/separated, contaminants removed, baled, crushed etc). WEEE's that are disposed of to landfill, incinerated or recovered without any pretreatment have potentially serious consequences.

You will find a crossed out wheeled bin symbol on the base of the eircom 8010R. The symbol means that the equipment should not be disposed of with general household waste.

Play your part by -

- Waste batteries must never be placed in your waste disposal or recycling bins. There is a bin for small batteries in your local store. Battery recycling is free.
- Not disposing of this equipment with your general household waste.
- Bringing this eircom 8010R or the product it replaced to your civic amenity site at end of life for recycling or alternatively.
- Post or deliver to.


eircom
eircom Recovered Engineers,
Central Warehouse,
Clondalkin Industrial Est.
Dublin 24.

There is no disposal charge for end of life equipment returned to eircom or deposited at civic amenity sites.

Reduce, Reuse, Recycle
eircom working for the environment

WARRANTY

- a) *The eircom 8010R has a warranty of 12 months and is guaranteed to be free from defects in materials and workmanship during that period.*
- b) *Should your eircom 8010R fail to function properly please call the helpdesk on **1850 60 20 60**.*
- c) *The product must have been used for the intended purpose and must not have been subjected to wilful or accidental damage.*
- d) *In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 12 months of purchase, eircom shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device.*
- e) *This warranty does not cover damage caused by excessive voltage, lightning, liquid or faults on the telephone line. If the product or serial number has been tampered with in any way, any repairs attempted or non-rechargeable batteries found to be used the warranty shall be considered null and void.*
- f) *This warranty does not affect your statutory rights.*

*For operational queries please call the helpdesk on **1850 60 20 60**.*

*For queries relating to eircom services please call eircom on **1901**.*

